

## Roam VI Harness

Size Charts

CM | INCHES

SIZE	WAIST SIZE*	SPREADER BAR SIZE
X-SMALL	61 - 63.5	20.3
X-SMALL	66 - 68.6	25.4
SMALL	71.1 - 73.7	20.3
SMALL	76.2 - 78.7	25.4
MEDIUM	81.3 - 83.8	20.3
MEDIUM	86.4 - 88.9	25.4
LARGE	91.4 - 94	20.3
LARGE	96.5 - 99.1	25.4
X-LARGE	102 - 104	25.4
X-LARGE	107 - 112	30.5
X-LARGE	114 - 119	35.6

\* Measure Around Belly Button

\* If your sizing falls in between a size, please size down, but step up to bigger bar size.

Example: If you're a 35.5" waist you should wear a medium with a 12" spreader bar.